

HÄFELE



USER MANUAL

ENGLISH

Thank you for purchasing our product. Please read through the manual prior to starting using the product.

- This manual contains product warranty. Please fill up the warranty with details on installation shop, contact information and data of installation to receive A/S under warranty.
- Product features and design may change without prior notification in order to improve product quality.

- The images contained in this manual are only reference used for description and instruction and its types and colors may differ in accordance with the product model.

Safety cautions



Prohibited

Do not dismantle the product yourself. It causes malfunction of product. If you dismantle the product yourself, the product may not function as it should.



Prohibited

Do not impact on or alter the product. It may cause malfunction or abnormal operation.



Caution

Do not use the product in place with water or humidity. Since the product does not have water and dust proof structure, it may cause product malfunction due to short circuit, etc.



Caution

Completely block holes on door after product installation. There is a risk of intrusion through milk hole or other door holes.



Caution

Do not place inflammables such as gas lighter near the product. It may cause malfunction or abnormal operation.



Prohibited

Do not use the product in place with direct sunlight or high temperature. It may cause malfunction or abnormal operation.



Prohibited

Do not install the product in place which water like snow or rain can come through in. It may cause malfunction or abnormal operation.



Prohibited

Do not directly spray water when cleaning the product. Water coming through into the product causes malfunction or abnormal operation.



Caution

Replace all batteries with new one when changing batteries. When changing batteries, replace all batteries with new one. If using old batteries together new one, product life span cannot be guaranteed and product may malfunction.



Caution

Use alkaline battery only. Using rechargeable battery may cause product malfunction.

⚠ Caution


Since the product is keyless door lock, a part of door lock may need to be damaged in case of malfunction.

It needs to be familiar with how to use manual closing and opening device in case of emergency.


1. Voltage: DC6V / 2. Be cautious that reverse installation of batteries causes liquid leakage or a burst.
3. When battery is flat, replace all batteries and DO NOT use used batteries with new one.
4. Sensor operation temperature display: 60°C (±10°C)

Product Structure and Name


■ Outdoor body (Types and colors of outdoor body will differ depending on the model.)

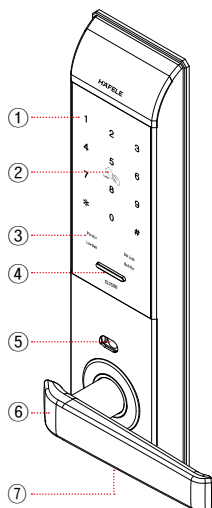

Touchpad type A

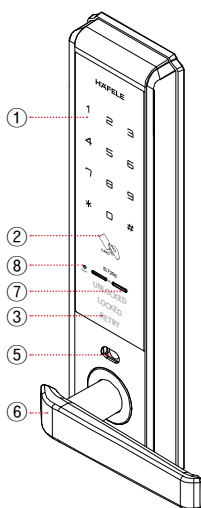




Touchpad type B

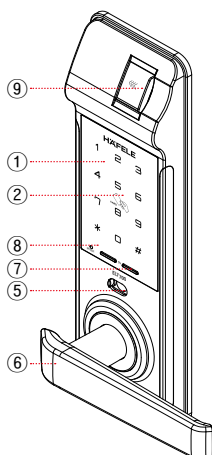

Fingerprint recognition type

- ① Keypad buttons
- ② Card/Key tag input
- ③ External alarm lamp
- ④ Start / End button
- ⑤ Emergency Key Hole
- ⑥ Handle
- ⑦ 9V emergency power supply socket
- ⑧ Reset button
- ⑨ Fingerprint input

■ Indoor body (Types and colors of indoor body will differ depending on the model.)

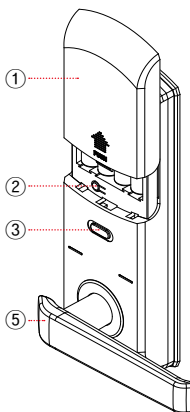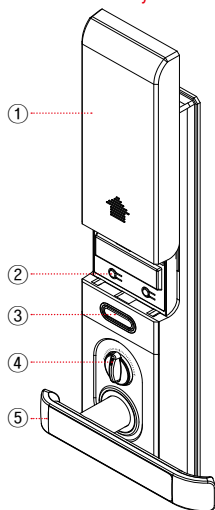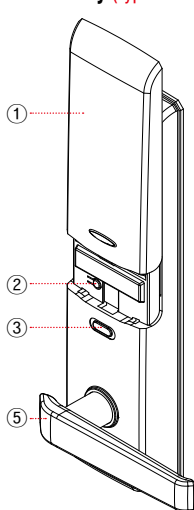


- ① Battery cover
- ② Input button () : When you register or delete your password, use the card/key tag and the remote controller.
- ③ Open/Close button : Use Open/Close button to open or close the door in the room.
- ④ Manual opening and closing device : Use manual opening/closing device to open the door manually (in case of a fire or other emergencies).
- ⑤ Handle

■ **Basic components** (Check if your product contains all contents.)

1 outdoor body / 1 indoor body / 1 Mortise (latch)
Strike box 1 set / 1 user manual / 1 installation guide
Bolt set / 4 AA batteries (Alkaline)

 ! **Caution** (Applied model)



※ Remove the protection tape on the touch pad after digital door lock installation

■ **Extra accessories**



Anti-metal card



Small card
(Tag)



Emergency
key

■ **Optional accessory sold separately**



Support plate



Remote controller
(Applied models with remote controller)

※ Basic components (Extra accessories) and its quantity may differ depending on the product model
(Opening/closing function)

※ Types and colors of Card/Remote controller may change.

1. Master Mode

Set in Master Mode

■ **Setting master control number :**

Inputting Master control password is required when change password or register/delete cards/remotes.

1. Press "Input button" in the indoor body.
2. Press "0" and "#" in order.
3. Register a new master control password. (3~19digits)
4. Press "*" button to complete.

※ In the state of Master mode, it always make two short beep sound whenever "Input button" is pressed.

※ Master control password can be used to unlock the door like the same way of user password.

Registering/Changing User Password In Master Mode

A. Registering User Password

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Register User password and "*" button to complete.

B. Changing User Password

※ Change password in the same way as above.

※ When registering new password, previous password is automatically deleted.

Caution

※ Make sure that a door keeps open when registering/changing password.

※ Default factory password is set to "1234". Please update the password after installation.

※ To go to the next stage, perform it before the lamp turns off (within 15 seconds).

Registering/Deleting User Card In Master Mode (Applied model)

A. Registering Card

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Contact each Smart card to be registered to the external input part in the outdoor body. Up to 50 Cards can be registered.
4. Press "*" button to complete.

B. Deleting Card

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Press "0" button two times and "*" button to complete.

※ Caution

- If deleting Card/Key tag, all registered Cards/Key tags will be deleted. It is required to register new Cards/Key tags after deletion.
- For card/key tag model, please use and register only card/key tag provided by us.
- We are not liable for any security incident if user uses other cards or tags. (Such as traffic card, credit card, etc) rather than dedicated card/key tag.

Registering/Deleting Remote In Master Mode (Applied model)

A. Registering Remote

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Press "0", "# " button in order
4. Press the one of two buttons on the Remote. Up to 15 Remotes can be registered.
5. Press "*" button to complete.

B. Deleting Remote

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Press "5" button two times and "*" button to complete.

※ Remote control can be registered up to 15ea.

※ Door is closed or opened within 2~3 seconds after pressing the button.

※ Caution

If deleting remote, all registered remote will be deleted. It is required to register new remotes after deletion.

Registering / Deleting for the linkage of Video phone In Master Mode (Applied model)

< Specifications for 6-Pin Connector >

- Pin1 (red) → Power DC12V input
Pin2 (blue) → Power GND
Pin3 (orange) → Polarity Open input
Pin4 (brown) → Signal GND

※ Improper connections may cause breakdowns or malfunctions, so please consult an expert.

■ Registration

1. Press "Input button" in the indoor body.
2. Enter the Master control password and "*" button.
3. Press "0", "# " button in order.
4. Press the button on the TX module to complete registration. ("ppiring" sound)

■ Deletion

1. Press "Input button" in the indoor body.
2. Enter the Master control password and "*" button.
3. Press "0", "# " button in order.
4. Press "5" button two times and "*" button to complete deletion. ("ppiring" sound)

Registering/Deleting Fingerprint in Master Mode (Applied model)

A. Registration

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Push the scanner cover to leftside and input a fingerprint to be registered on the scanner primarily until first "beep" sound and take off.
4. Re-input the same fingerprint on the scanner secondarily until second "beep, beep" sound and take off.
5. Lastly re-put the same finger again thirdly until "ding-dong-dang" sound to inform successful registration.
6. Press "*" button to complete registration.
("Ding dong" sound when successfully registered, three short "beep" sounds when failed)

B. Deleting

1. Press "Input button" in the indoor body. (two short beep sound)
2. Enter the Master control password and "*" button.
3. Press "0", "1" and "*" button in order to complete deletion.

※ Caution

- Keep the finger placing on the scanner until it makes sounds.
- When failed to register, start from the first step again.
- Up to 200 fingerprints can be registered.

※ Notice

- The fingerprints of infants in the developmental stage or some users with unique fingerprints (those which cannot be registered) may not be recognized.
- Scanning foreign substance (sweat and moisture)-stained fingerprints or dry fingerprints may lead to failure to recognize fingerprints.
- Stay clean the fingerprint input unit so it is not stained with foreign substances and do not use a wet finger.
- If fingerprint recognition is not successful, input and use the fingerprints of another finger.
- Registered fingerprints may be also registered in a duplicate manner.

2. Revert to Non-Master mode from Master mode

No need to input master password when change/password or register/delete cards/remotes.

1. Press "Input button" in the indoor body.
2. Input the registered master control password.
3. Press "*", "0", "#", "0", "0", "*" button in order to complete.

Remark: In the state of Non-Master Mode, it always make one short beep sound whenever "Input button" is pressed.

Registering/Changing User Password In Non-Master Mode

A. Setting User-password

1. Open the battery cover in the indoor body.
2. Press "Input button". (one short beep sound)
3. Input the new password. Up to 4 to 19 digits can be registered.
4. Press "*" button to complete the registration. "Ding-dong" sound will occur to inform you of successful input.

B. Changing User-password

- ※ Change password in the same way as above.
- ※ When registering new password, previous password is automatically deleted.

Registering/Deleting User Card In Non-Master Mode (Applied model)

A. Registering User Smart card

1. Open the battery cover in the indoor body.
2. Press "Input button". (one short beep sound)
3. Contact each Smart card to be registered to the external input part. Up to 1 to 50 keys can be registered.
4. Press "*" button to complete the registration. "Ding-dong-dang" for success / "Beep" sound for failure will occur.

B. Deleting User Smart card

1. Open the battery cover in the indoor body and press "Input button" one time.(one beep short sound)
2. Press "0" button two times in the number pad in the outdoor body.
3. Press "*" button to complete the deletion

※ Caution : When the Smart card is deleted, existing registered Smart card are completely deleted.
Then, newly register Smart card to be used.

Registering/Deleting Remote In Non-Master Mode (Applied model)

A. Registration

1. Press "Input button" in the indoor body. (one short beep sound)
2. Press "0", "# " button in order
3. Press the one of two buttons on the Remote. Up to 15 Remotes can be registered.
4. Press "*" button to complete.

B. Delete

1. Press "Input button" in the indoor body. (one short beep sound)
2. Press "5" button two times and "*" button to complete.

Registering / Deleting for the linkage of Video phone In Non-Master Mode (Applied model)

< Specifications for 6-Pin Connector >

Pin1 (red) → Power DC12V input
Pin2 (blue) → Power GND
Pin3 (orange) → Polarity Open input
Pin4 (brown) → Signal GND

※ Improper connections may cause breakdowns
or malfunctions, so please consult an expert.

■ Registration

1. Press " Input button " in the indoor body.
2. Press " 0 ", " # " button in order.
3. Press the button on the TX module to complete registration. ("ppirring" sound)

■ Deletion

1. Press " Input button " in the indoor body.
2. Press " 0 ", " # " button in order.
3. Press " 5 " button two times and "*" button to complete deletion.
("ppirring" sound)

Registering/Deleting Fingerprint in Non-Master Mode (Applied model)

A. Registration

1. Press "Input button" in the indoor body. (one short beep sound)
2. Slide the scanner cover to leftside and put a fingerprint to register on the scanner until first "beep" sound.
3. Put the same fingerprint on the scanner until second "beep, beep" sound.
4. Lastly put the same finger again until "ding-dong" sound to inform successful registration.
5. Press "*" button to complete registration.
("Ding dong" sound when successfully registered, three short "beep" sounds when failed)

※ Caution : - Keep the finger placing on the scanner until it makes sounds.
- When failed to register, start from the first step again.
- Up to 200 fingerprints can be registered.

B. Delete

1. Press "Input button" in the indoor body. (two short beep sound)
2. Press "0", "1" and "*" button in order to complete deletion.

※ Notice

- The fingerprints of infants in the developmental stage or some users with unique fingerprints (those which cannot be registered) may not be recognized.
- Scanning foreign substance (sweat and moisture)-stained fingerprints or dry fingerprints may lead to failure to recognize fingerprints.
- Stay clean the fingerprint input unit so it is not stained with foreign substances and do not use a wet finger.
- If fingerprint recognition is not successful, input and use the fingerprints of another finger.
- Registered fingerprints may be also registered in a duplicate manner.

3. Common Features

Door Opening

■ Opening from the outdoor

A. Opening the door using user password from the outdoor

1. Press more than 2 numbers on the number pad. ("Beep" sound occurs and the digit board lights on.)
2. Enter the user password and press "*" button to open a door

※ **Caution** : In case five times errors of the password, the machine does not work for 1 minute.
When the machine has not worked, you should use it in one minute.

B. Opening the door using the Smart card from the outdoor (Applied model)

Contact the registered Smart card to the input part in the outdoor body.
"Ding-dong" sound will occur and the door will be opened.

C. Opening the door using Fingerprint from the outdoor (Applied model)

Place the registered fingerprint on the scanner. ("Beep" sound) & Raise down the handle to open the door

※ Master control password can be used to unlock the door like the same way of user password.

■ Opening from the indoor

※ **MAIN LOCK** : Press "Open/Close button" to open the door or with handle down, you can open the door easily.

Door Closing

■ Closing from the outdoor

- ※ **Auto mode** : Close the door, It will lock automatically.
- ※ **Manual Mode**: Touch more than 2 numbers on the number pad to close the lock.

■ Closing from the indoor

- ※ **Auto mode** : Close the door. It will lock automatically.
- ※ **Manual Mode**: Press "Open/Close button" to lock the door or Press remote button to lock the door.

Useful Function

■ Auto locking function

- Manual Mode : Press "Input button" once → "#" button → "Input button". (short one "beep" sound)
- Auto Mode : Press "Input button" once → "#" button → "Input button". (Long "ding-dong" sound.)
- ※ Setting method is the same. Whenever it repeats this process, it changes from one another.
- ※ If the lock is set in auto mode, it locks automatically when close the door.

■ Auto lock time is changeable up to 2~9 seconds

Press "Input button" → "8" button → desired times ("2"~"9" buttons) → "*" button.

■ Indoor dual lock function

If you set the indoor double locking system with the door locked, the door is not opened even though the password is entered or the key is applied from outside.

- ※ Setting: Press "Open/Close button" for 5 seconds. It sounds "ding-dong-dang" for success.
- ※ Cancellation: Main key → Raise down the handle or Press and hold Open/Close button for more than 5 seconds to disable the function and open a door.

■ Outdoor dual lock function (burglar prevention through a slot)

When the external dual lock is set, the door does not open in spite of pressing "Open/Close button" from the indoor.

-Touch pad type A

- ※ Setting : Press and hold "Start/End" button on outdoor body for more than 5 seconds to enable dual locking function
- ※ Cancellation : Press and hold "Start/End" button on outdoor body → Enter registered password
→ Press "*" or "Start/End" button to disable the function

-Touch pad type B & Fingerprint Lock

- ※ Setting : Press more than 2 buttons on touch keypad of outdoor body → Press and hold "#" button on outdoor body for more than 5 seconds to enable dual locking function
- ※ Cancellation : Press more than 2 buttons on touch keypad of outdoor body → Enter registered password
→ Press "*" button to disable the function

■ Password Exposure-proof function

Before inputting passwords, press random digit buttons without limitation and then input the password, and the password will be concealed.

■ Lock Error Check

When the door is not closed normally, the machine will try to open the door three times and then "Beep" sound will occur to inform you of an error. ※ The bolt err in the external alarm lamp lights on.

■ Sound Control Function (volumn low → high)

Open the battery cover → Press "input button" → "1" and "3" buttons → "*" button → "1" button several times for small sound and "3" button several times for loud sound → "*" button.

■ Fire Sensing Function (Built-in Fire Detection Sensor)

When the thermal detection sensor detects heat ($60^{\circ}\text{C} \pm 10^{\circ}\text{C}$), the door will be automatically opened.

■ Battery Exchange Time

If the built-in battery voltage gets downed, the lamp blinks before 7 days and a saved melody rings. You should replace all of them by new spares.

■ Opening the Door with 9V Spare Battery.

A. Opening the Door with the Password:

1. Contact 9V to the emergency power terminal
2. Press more than 2 numbers to light on number pad
3. Input password and Press "*" button to open the lock.

 


B. Opening the door with RF card


1. Contact a 9V battery to the emergency power terminal
 2. Contact Smart card to the input part to open the lock
- ※ Make sure that battery is properly contacted with emergency socket when using this function.
(External emergency power supply socket does not have polarity)
 - ※ Location of external emergency power supply socket may differ according to the product model.

■ **Re-set function** (Function to reset program by pressing Reset button in case of temporary error rather than product malfunction.)

※ Press Reset button using a sharp object such as ballpoint pen, toothpick, etc




■ External alarm function (Applied model with external alarm function)

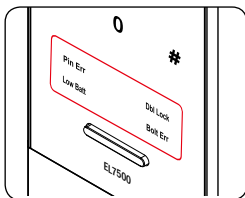

- External '**Pin Err**' lamp flashes when entering invalid password. Enter correct password again.
- '**Low Batt**' lamp flashes, when batteries are going flat. Immediately change all of 4 batteries.
- When '**Dual lock**' lamp flashes, a door will not open even after entering correct password. (Dual locking function is enabled).
- If '**Bolt Err**' lamp flashes, open/close function is not working properly since dead bolt(Latch) of indoor body is stuck in front (Strike).

■ Function to open a door using outside emergency key

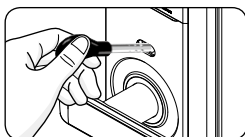

The function allows opening a door using emergency key in case of emergency or other particular situations. Pull emergency hole cap to side, insert emergency key to the hole and turn around the key.

- ※ User the function only in case of emergency. Alarm sounds when using emergency key.
- ※ Always take the emergency key with you in case of emergency.

Fault diagnosis and troubleshooting

Symptoms	Troubleshooting
Cannot remember password	- Open a door using card/key tag and register new password (number-dedicated models excluded)
Password input failure (5 attempts)	- All functions are not available for 1 minute after failure of 5th attempt. Wait for 1 minute and set new password or card/key tag.
Door is not automatically locked	- Check if auto locking function is enabled
* button is not working	- If other functions are not working, check if batteries are properly inserted. If batteries are flat, replace them with new batteries.
External button sound is not working and lamp is not flashing	- Check if there is any liquid leakage on battery case or product and if so, wipe out contact area with a dry cloth.

Product specifications

Type		Specification
Basic items	Use password	3 ~ 19 digits
	The number of touch keys (Cards/Key tags) to be registered	Up to 50 (Applied models with touch key and card/key tag)
	The number of remote controller to be registered	Up to 15 (Applied models with remote controller)
	The number of fingerprints to be registered	Up to 200 (Applied models with the input of the fingerprints)
	Thickness of door	40~90mm
Power supply	Power source	6V (AA Size 1.5V Alkaline Battery X 4EA)
	Emergency power source (Do not have polarity)	9V square alkaline battery (Purchase separately)